

*SMART WHEELS*  
INSTRUCTION MANUAL

---

# REMOTE PAIRING PROCEDURE





## Smart Wheels Remote Pairing Procedure

1. Ensure your wheels are off and in sleep mode
2. Put the remote into pairing mode:
  - a. Press and hold the LEFT and RIGHT buttons on the remote at the same time for at least 10 seconds.



- b. You should now see 3 solid blue LEDs on the remote. This indicates the remote is in pairing mode. It will stay this way for 50 seconds.



3. Connect charger, wait for red light.



4. Disconnect charger, wait for light to extinguish.
5. With wheel lying flat on the table (either face-down or face-up), complete one full rotation of the wheel by hand. The easiest way to do this is to hold the tyre with one hand and use your finger in the charger port to rotate the inner wheel (as shown below)



6. Connect charger, wait for red light.



7. Disconnect charger, wait for light to extinguish.
8. This wheel should now successfully be paired to the remote.

There are some indicators that show that it has succeeded:

- a. On the wheel, the LED should go BLUE momentarily, followed by GREEN.
  - b. On the remote side, the three BLUE LEDs should flash on and off three times.
9. Repeat steps 3-8 again for 2<sup>nd</sup> wheel. Keep an eye out for successful pairing of the second wheel using either indicator 8a or 8b.
  10. Remote will return to sleep, and pairing has now been fully established for both wheels.

**If you exceed 50 secs performing this procedure, the remote will go to sleep (as shown below by the following sequence of LEDs) and you must start again by going back to step 2**

