

CBM3

INSTRUCTION MANUAL

LEG STAY CABLE REPLACEMENT

VERSION 1.0

 **CONCOURSE**
CONQUER THE COURSE





LEG STAY CABLE REPLACEMENT INSTRUCTIONS

STEP 1:

- Remove the Buggy from the golf bag and open the frame completely.
- Place the buggy on a bench or table to allow for easy access to all the buggy components.

Step 2:

- Using the Allen Key Provided remove the Stay Cable securing Screw as per - Figure 13 below while holding onto the Leg Stay Cable cover and Securing nut as per - Figure 14 below. Repeat this procedure for both sides.

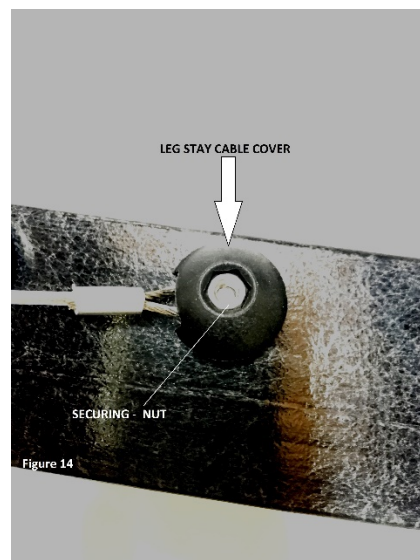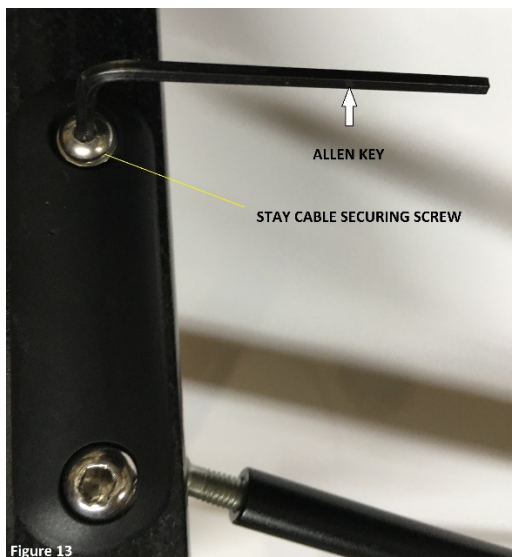

Step 3:

- Place new Leg Stay Cable over the Stay Cable Securing Screw as per – Figure 15 below and re fit the Leg Stay Cable Cover removed earlier as per – Figure 14 above and Figure 15A below – then tighten screw using the Allen Key - Repeat this procedure for both sides.

